

GSM-PRO2(E)-4G (EU/US)

Instruction Manual





<u>Contents</u>

1	DES	CRIPTION	4
1.1	Sum	mary	4
1.2	Mod	lule types	4
1.3		Safety instructions	4
2	SOF	TWARE	5
2.1	Syste	em requirements	5
2.2	Soft	ware installation	5
3	MO	DULE	6
3.1	Place	e the SIM card	6
3.2	Conr	nect the antenna	7
3.3	Conr	nect to power	7
3.4	Conr	nect to PC	8
3.5	I FD	description	8
3.5	5.1	Module status indication	8
	~~~		_
4	CON	IFIGURATION	9
	Conr	nect to the module	۵
4.1	Com		9
4.1 4.2	Conf	figuration	0
4.1 4.2 4.2	Conf 2.1	figuration	0
4.1 4.2 4.2 4.2	Conf 2.1 2.2	iguration	
4.1 4.2 4.2 4.2 4.2	Conf 2.1 2.2 2.3	figuration	
4.1 4.2 4.2 4.2 4.2 4.2	Conf 2.1 2.2 2.3 2.4	iguration	
4.1 4.2 4.2 4.2 4.2 4.2 4.2	Conf 2.1 2.2 2.3 2.4 2.5	figuration	
4.1 4.2 4.2 4.2 4.2 4.2 4.2 4.2 4.3	Conf 2.1 2.2 2.3 2.4 2.5 Diag	Figuration       10         Upload to the module       10         Download from module       10         Import / Export settings       10         OTA configuration       10         Reset module to default       11         nostics       11	0 0 0 0 0 1 2
4.1 4.2 4.2 4.2 4.2 4.2 4.2 4.3 4.3	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1	figuration	0 0 0 0 1 2 2
4.1 4.2 4.2 4.2 4.2 4.2 4.2 4.3 4.3 4.3	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont	figuration	0 0 0 0 1 2 3
4.1 4.2 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.4 4.4	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1	figuration	
4.1 4.2 4.2 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.4 4.4 4.4	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1	figuration 10   Upload to the module 10   Download from module 10   Import / Export settings 10   OTA configuration 10   Reset module to default 11   nostics 11   Signal quality 11   tacts 11   Add/delete contacts 11   Import / Export contacts 11	
4.1 4.2 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.4 4.4 4.4 4.4	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1 4.2 4.3	iguration       10         Upload to the module       10         Download from module       10         Import / Export settings       10         OTA configuration       10         Reset module to default       11         nostics       12         Signal quality       11         racts       12         Add/delete contacts       12         Import / Export contacts       12         Phone call       12	
4.1 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.4 4.4 4.4 5	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1 4.2 4.3 SET	iniguration       10         Upload to the module       10         Download from module       10         Import / Export settings       10         OTA configuration       10         Reset module to default       11         nostics       12         Signal quality       12         racts       11         Import / Export contacts       12         Phone call       14	
4.1 4.2 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.4 4.4 5 5 5.1	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1 4.2 4.3 SET Mair	riguration       10         Upload to the module       11         Download from module       11         Import / Export settings       11         OTA configuration       11         Reset module to default       11         nostics       11         Signal quality       11         racts       11         Add/delete contacts       11         Import / Export contacts       12         Phone call       12         TINGS       14	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
4.1 4.2 4.2 4.2 4.2 4.2 4.2 4.2 4.2 4.2 4.2	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1 4.2 4.3 SET Mair Mob	riguration	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
4.1 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.3 4.4 4.4 4.4 5 5.1 5.1 5.2 5.3	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1 4.2 4.3 SET Mair Mob Roar	riguration	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
4.1 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.3 4.4 4.4 4.4 5 5.1 5.1 5.2 5.3 5.4	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1 4.2 4.3 SET Mair Mob Roar App	riguration	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
4.1 4.2 4.2 4.2 4.2 4.3 4.3 4.3 4.3 4.4 4.2 4.2 5 5.1 5.1 5.2 5.3 5.4 5.5	Conf 2.1 2.2 2.3 2.4 2.5 Diag 3.1 Cont 4.1 4.2 4.3 SET Mob Roar App APN	riguration       10         Upload to the module       11         Download from module       11         Import / Export settings       11         OTA configuration       11         Reset module to default       1         nostics       11         Signal quality       1         cacts       11         Add/delete contacts       11         Import / Export contacts       11         Phone call       1         rile Data       14         settings       14	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0



5.6	SMT	Ρ	14
6	GEN	ERAL MESSAGES	15
6.1	1	Periodical message	15
6.1	2	Power cycle message	15
6.1	3	Power down message	15
6.1	4	GSM connection loss message	15
6.1	5	Recipients	15
6.1	6	Additional messages	15
7	LOG		16
7 1		16	
7.1	1	Event log	16
7.1	2		16
7.1	3	Counter log	17
/.1			1,
8	SOF	TWARE UPDATES	18
8.1	Upda	ate	18
8.1	1	Manual firmware updates	18
8.1	2	OTA firmware update	18
9	I/O (	CONFIGURATION AND MESSAGING	19
9.1	Digit	al Output	19
9.1	1	Configuration	19
9.1	2	Select users	19
9.1	3	Messaging	19
	9.1.3	1 Number ID	19
	9.1.3	<ul> <li>3 Change the digital output status</li> </ul>	19 19
9.1	4	Using the one-shot function	20
9.1	5	React on RING	20
9.1	6	Link DO to UI	20
9.1	7	Activate when GSM connection is lost	20
9.1	8	Preserve status on startup	20
9.1	.9	Wiring example	20
9.2	Univ	ersal Inputs	21
9.2	2.1	Select receivers	21
9.2	2.2	Confirmation sequence	21
9.3	Anal	og inputs	21
9.3	3.1	Configuration	21
9.3	3.2	Wiring example	22
Q /	Diait	al Innuts	- วว
۶.4 ۵ ۸	טוצוט 1 1	Configuration	∠⊃ ?2
9.4 0 /	r.⊥ I 2	Wiring example	23 22
9.4	r.∠	אאוו ווא באמווואוב	23



9.5	Counte	۲	. 24
9.5	5.1 W	'iring example	. 24
9.6	Read a	II IO statuses	. 25
9.7	Link m	ultiple modules	. 25
9.8	IO ope	rating hours counter	. 25
9.8	3.1 D	igital output counter	. 25
9.8	3.2 D	gital input counter	. 25
10	EXTEN	SIONS	.26
10.1	Configu	Jration	. 26
10	.1.1	Hardware	. 26
10	.1.2	Software	. 26
10.2	GSM-P	RO-4DO	. 27
10.3	GSM-P	RO-10DI	. 27
10.4	GSM-P	RO-8AI	. 28
10	.4.1	Configuration	. 28
10	.4.2	Wiring example	. 29
10	.4.3	Current input	. 29
10.5	GSM-P	RO-4AO	. 30
11	MODB	US SLAVE	.31
ΤT	NIODD		
11.1	Hardwa	are	. 31
11 11.1 11	Hardwa	are COM settings	. 31 . 31
11.1 11.1 11 11.2	Hardwa .1.1 Softwa	are COM settings re	. 31 . 31 . 31
11.1 11.1 11.2 11	Hardwa .1.1 Softwa .2.1	are COM settings re Slave address	. 31 . 31 . 31 . 31
11.1 11.1 11.2 11 11	Hardwa .1.1 Softwa .2.1 .2.2	are COM settings re Slave address Message registers	. 31 . 31 . 31 . 31 . 31 . 32
11.1 11.1 11.2 11 11 11 11	Hardwa .1.1 Softwa .2.1 .2.2 .2.3	are COM settings re Slave address Message registers Digital registers	. 31 . 31 . 31 . 31 . 32 . 32
11.1 11.1 11.2 11 11 11 11 11	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4	are COM settings re Slave address Message registers Digital registers Analog registers	. 31 . 31 . 31 . 31 . 32 . 32 . 32
11.1 11.1 11.2 11 11 11 11 11 11	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5	are COM settings re Slave address Message registers Digital registers Analog registers Default messaging	. 31 . 31 . 31 . 31 . 32 . 32 . 32 . 32
11.1 11.1 11.2 11 11 11 11 11 11 11	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6	are COM settings re Slave address Message registers Digital registers Analog registers Default messaging Restart module	. 31 . 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32
11.1 11.1 11.2 11 11 11 11 11 11 11 11	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6 OTHEF	are COM settings re Slave address Message registers Digital registers Analog registers Default messaging Restart module MESSAGES	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32
11.1 11.1 11.2 11 11 11 11 11 11 12 12.1	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6 OTHEF Module	are COM settings re Slave address Message registers Digital registers Analog registers Default messaging Restart module MESSAGES Preset	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 32 . 33
11.1 11.1 11.2 11 11 11 11 11 12 12.1 12.2	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6 OTHEF Module Stop m	are COM settings re Slave address Message registers Digital registers Analog registers Default messaging Restart module MESSAGES e reset essaging	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 32 . 33 . 33
11.1 11.1 11.2 11 11 11 11 11 12 12.1 12.2 12.3	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6 OTHEF Module Stop m Show a	are COM settings re	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 33 . 33
11.1 11.1 11.2 11 11 11 11 11 11 12 12.1 12.2 12.3 12.4	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6 OTHEF Module Stop m Show a Locatic	are	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 33 . 33
11 11.1 11.2 11 11 11 11 11 11 11 12 12.1 12.2 12.3 12.4 13	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6 OTHEF Module Stop m Show a Locatic	are	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 33 . 33
11.1 11.1 11.2 11 11 11 11 11 11 11 11 12 12	Hardwa .1.1 Softwa .2.1 .2.2 .2.3 .2.4 .2.5 .2.6 OTHEF Module Stop m Show a Locatic ADDIT GSM-P	are	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 32 . 33 . 33
11.1 11.1 11.2 11 11 11 11 11 11 11 11 12 12	Hardwa 1.1 Softwa 2.1 2.2 2.3 2.4 2.5 2.6 OTHEF Module Stop m Show a Locatic ADDIT GSM-P	are	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 32 . 33 . 33
11.1 11.1 11.2 11 11 11 11 11 11 11 12 12.1 12.2 12.3 12.4 13 13.1 14 14	Hardwa 1.11 Softwa 2.1 2.2 2.3 2.4 2.5 2.6 OTHEF Module Stop m Show a Locatic ADDIT GSM-P TROUE	are	. 31 . 31 . 31 . 32 . 32 . 32 . 32 . 32 . 32 . 32 . 33 . 33



14.2	No connection to GSM network	35
14.3	The module doesn't send any messages	35
14.4	The module doesn't start	35
14.5	Diagnosis	35
15	APPENDIX: SMS COMMANDS	36
16	APPENDIX: DIAGNOSTIC COMMANDS	38
17	APPENDIX: SIGNAL STRENGTHS	39
18	APPENDIX: MODBUS REGISTERS	40



## 1 Description

## 1.1 Summary

The GSM-PRO2(E) is a compact remote control and messaging system. All IOs are monitored by SMS and email and controlled by SMS communication through the GSM network.

The module can be configured with the GSM-PRO2 PC-software. Each IO can be modified by user-defined parameter names and messages. A selected group of users can be chosen from the phonebook to control the module, or only receive messages.

On each defined input status change (rising or falling flank for digital inputs or reached level for analog inputs) the module sends a pre- or user-defined message to the selected group of users. The outputs can be set when a selected user sends a pre- or user-defined SMS to the GSM-PRO2(E).

The GSM-PRO2(E) sends a periodical message on user defined times. On power loss the module holds enough power to send SMS messages to a selected group of users. It also sends messages when coming back from a power reset.

## 1.2 Module types

The GSM-PRO2 consists of the modules as described below. For images and connection examples in his document the outline of the GSM-PRO2 is used.

When referring to a GSM-PRO2(E) in this document it is recalled as 'the (a) module'.

The GSM-PRO2(E) comes in 4 variations: with or without GPS, with or without 4G.

#### GSM-PRO2

- 1 Digital Output (DO), relay CO contact 250V/5A
- 1 counter input
- 2 Universal Inputs (UI) which can be set by software as:
  - Analog Input (AI), 0..10V
  - Digital Input (DI)

#### GSM-PRO2E

- 4 Digital Outputs (DO), relay CO contacts 250V/5A
- 1 counter input
- 10 Universal Inputs (UI) which can be set by software as:
  - Analog Input (AI), 0..10V
  - Digital Input (DI)

## 1.3 A Safety instructions

- This device is NOT suitable for monitoring sensible or time critical processes. Power interruption or GSM network failures do not guarantee flawless monitoring.
- Keep ESD precautions in mind when opening the module.
- This module can require a GSM data connection (GPRS or 3G). For information about costs ask your GSM service provider.



## 2 Software

Download the latest GSM-PRO2 interface software at: <a href="http://www.conta-clip.com/en/service/">http://www.conta-clip.com/en/service/</a>

## 2.1 System requirements

The following requirements are needed to run and use the software properly:

- Windows 7, 8, 10
- USB port
- Internet connection

## 2.2 Software installation

As the program needs to install hardware drivers make sure you have administrator rights.

Run the GSM-PRO2_setup.exe to install the application. The setup wizard will guide you through the rest of the setup process.

After starting the GSM-PRO2 user interface set the language by: Settings (Gearbox Icon) -> Language. The chosen language is saved and recalled at start up.



## 3 Module

**NOTE**: Keep ESD precautions in mind when opening the module.

### 3.1 Place the SIM card

**NOTE**: Place or replace the SIM card only with the power supply turned off.

Place a Nano SIM card into the SIM card holder to access the GSM network:

• Lift the lid with a small flat screwdriver.



• Place a SIM card into the SIM card holder (image may vary).



• Replace the lid.

When a wrong PIN number is given 3 times the SIM card is locked and requests the PUK code. The diagnostics shows this in the error message. Access the 'advanced settings' by clicking the 'gearbox' icon. Insert the correct PUK and PIN code and click 'insert PUK code'



## 3.2 Connect the antenna

Connect the GSM antenna on the GSM connector on the module. Connect the GPS antenna on the GPS connector on the module.



## 3.3 Connect to power

Connect the 24V and 0V to a 24VDC power supply (10..30VDC).





## 3.4 Connect to PC

With the lid removed, connect a USB cable to the micro USB socket on the module, and the other end to a USB port on a PC.

NOTE: Make sure to install the interface software and drivers before connecting the module to a PC.

### 3.5 LED description

#### 3.5.1 Module status indication

After connecting the power it takes about 10 seconds before the first Led activates.

The Led 'Run' indicates module activity:

- Flash = starting-up (takes about 90 seconds)
- ON = ready for use (blinks every 10 seconds)
- OFF = no power

The Led 'Com' indicates network activity:

- green ON = connected to GSM network
- green Flash = roaming GSM network
- green OFF = not connected to GSM network
- red ON = error (see diagnostics)

The Led 'Busy' indicates module activity:

• ON = module currently busy

After data transfers between the PC and the module, the module performs a reset.



## 4 Configuration

## 4.1 Connect to the module

Connect 24VDC to the module and connect a USB cable between the module and a PC USB port. Wait for the module to start up and run the module interface software.

On start up the configuration software searches all available COM ports for an available module. When found, the software downloads the diagnostic data and prompts to download the settings from the device. If chosen yes, the user interface will be automatically updated.

If the module is found the 'module type' at the upper left side will appear.



## 4.2 Configuration

Press the 'menu' button to edit the module:



#### 4.2.1 Upload to the module

Upload current configuration software settings to the module. **NOTE**: uploading settings to the module overwrites all settings within the module. Therefore it is highly recommended to download the settings from the module first, before uploading any new changes.

#### 4.2.2 Download from module

Download all settings from the module into the interface.

#### 4.2.3 Import / Export settings

Export the settings to preserve them for later usage after closing the user interface. To export all settings click the 'menu' button and 'export settings'. Windows prompts 'save as'. Save the file with a given name on a preferred destination to the PC.

To import the settings click the 'menu' button and 'import settings'. Windows prompts to point the location of an exported *.ccf file.

#### 4.2.4 OTA configuration

The configuration with the user interface can be performed remotely. SMS: *rotac* to start this procedure. When the command is received the module uploads the current configuration to the Conta-Clip server and answers: 'module IMEI nr: <IMEI nr> <module name> configuration file uploaded.'

Fill the unique module International Mobile Equipment Identity (IMEI) into the user interface and press 'download configuration'. The user interface will be automatically updated with the settings of the (remote) module.

After making the required changes to the configuration, press 'upload configuration' to upload the new configuration onto the Conta-Clip server. Configuration files are kept on the server for 5 days.

SMS: *cotac* to inform the module that the new configuration is online. It will download the configuration and resets, this will take about one minute. Finally the module answers: '<module name> configuration file updated'.

The configuration file can also be requested by sending: *ccf* directly followed by a valid email address (e.g. *ccf*name@conta-clip.de). When ready, the module answers with a confirmation message and the configuration file is received by the email address. Download and import the file into the interface.



## 4.2.5 Reset module to default

Restore all settings in the module back to factory default.



## 4.3 Diagnostics

After connecting to the module the diagnostics information is filled. This shows:

- Registered GSM network or connection errors
- Signal strength and RAT (Radio Access Technology) GPRS or 3G
- Module firmware version
- IMEI number
- Error messages:
  - SIM PIN code required
  - SIM PUK code required
  - No SIM card
  - No user selected
  - No network registration

To request the diagnostics by SMS send: *status*.

**NOTE**: This information is a snapshot of the diagnostics and not displayed real-time. Refresh the diagnostics tab by clicking the 'module info' text.

#### 4.3.1 Signal quality

The signal quality information is defined by the Dutch Telecom Agency according to GSM network regulations. The full list is shown in the appendix.

To request the signal strength /and quality by SMS send: *csq*.



### 4.4 Contacts

The interface software has a contacts list to store all your contacts for further usage. All actions in the contacts list will auto save on completion.

#### 4.4.1 Add/delete contacts

To add a contact to the contacts click on the add button and fill in the name and phone number or email address.

NOTE: The phone number must be preceded by the international access code

- E.g.:
- UK +44
- Germany +49
- France +33
- Netherlands +31
- Italy +39
- Spain +34
- Poland +48
- Portugal +351

To delete a contact click the 'delete' button behind the contact.

#### 4.4.2 Import / Export contacts

The contacts can be exported for usage on another PC that has the interface software installed. To export the contacts click the 'contacts menu' button and 'export contacts'. Windows prompts 'save as'. Save the file with a given name on a preferred destination to the PC.

To import the contacts click the 'contacts' button and 'import contacts'. Windows prompts to point the location of an exported *.cpf file.

#### 4.4.3 Phone call

The module can generate a phone call on events and let it ring for a few seconds instead of sending a text message. To accomplish this put a 'C' in front of the phone number, e.g.: C+49123456789.



## 5 Settings

## 5.1 Main settings

The main functions of the module are configured in the 'settings' tab:

- Module name
- Module Phone Number
- SIM pin number, this is the pin number to access the SIM card.
- Admin user. The admin user has full access to the module and receives no general messages.

## 5.2 Mobile Data

Mark this checkbox if a data connection is required.

**NOTE**: Activating mobile internet can cause unexpected costs. Contact your provider for an appropriate subscription or prepaid card.

If the internet connection is required but not allowed after configuration send an SMS: *APN*,<*APN name*>,<*APN username*>,<*APN password*>

The module establishes an internet connection upon next restart. The module can now be upgraded or configured over the air.

If the internet connection has to maintain after restart, this can be configured remotely.

## 5.3 Roaming

If roaming is disabled the module blocks SMS and data connections when registered to a foreign GSM network. **NOTE**: contact your GSM service provider for roaming rates to avoid unexpected high billing.

## 5.4 App

Mark the checkbox to synchronize your module's events and IO status so it can be read and controlled by an Apple iOS, Windows or Android App.

## 5.5 APN settings

To register to a GPRS connection, enter the APN (Access Point Name) settings of your GSM service provider. If these settings are unknown to you, request them at your provider.

Remotely check the GSM data connection by sending: *cdc*. The module answers with the status of the connection.

## 5.6 SMTP

Enter the SMTP (Simple Mail Transfer Protocol) settings for outgoing email. The SMTP is used to send email via outgoing mail server.

Contact your Internet Service Provider or Webhost for further information about your SMTP settings.

**NOTE**: Some free mail providers like Gmail or Outlook require 2 way authentication and they do not accept unknown m2m devices to access their SMTP server.



## 6 general messages

#### 6.1.1 Periodical message

The module can send a periodical message on a user defined time:

- Daily, set the time
- Weekly, set the day and time
- Monthly, set the day of the month and time
- Add the IO status to the message

#### 6.1.2 Power cycle message

The module can send a message on every module start up, so the users are aware of a power recovery.

#### 6.1.3 Power down message

On power loss the module holds enough capacity to send SMS messages to the first 5 selected GSM users. The module detects a power down when the power < 8V and returns when the power >10V.

**NOTE**: The module tries to send the message to all defined users in the 'General Message' tab with the guarantee of the first 5 selected users.

#### 6.1.4 GSM connection loss message

The module buffers a message upon GSM connection loss and sends this along with a GSM recovered message once the connection is recovered.

#### 6.1.5 Recipients

The active users are those who receive the auto messages.

#### 6.1.6 Additional messages

The following automatic generated messages are send to the users in the general messages tab:

- Log full 90%
- Log full 100%
- DO counter full
- DI counter full
- Extension stopped responding
- Extension not responding on startup
- Wrong extension configured



## 7 Log

## 7.1 Log

The module can keep log files with a maximum size of 100kB. Select an email address in the Log tab to auto send a full log and continue logging.

When no email is selected and a log is 90% full the module sends a warning message to the users in the general message tab. When the log is 100% full the module sends another warning message and then it stops logging until downloaded and erased.

Each log can be viewed and erased while connected to the PC by clicking the button or remote by sending a command.

### 7.1.1 Event log

When this log is enabled the module logs the following events:

- Reached threshold limits on the AI inputs
- Rising and falling flank on the digital inputs (DI)
- Received messages
- Sent messages
- Data transmissions
- OTA updates
- Extension changes

When connected, view this log by clicking 'download event log'. View remote by sending: **evlog** directly followed by a valid email address (e.g. **evlog**name@conta-clip.de). When ready, the module answers with a confirmation message and the event log is received at the email address.

When connected erase the event log by clicking 'erase event log'. Erase remote by sending: *evclr*. The module answers with a confirmation message.

#### 7.1.2 Al log

Choose the interval for the AI log:

- 10 min (5 days)
- 15 min (7.5 days)
- 20 min (10 days)
- 30 min (15 days)
- 45 min (22.5 days)
- 60 min (30 days)

The log duration in days is based on logging 1 AI.

When connected, view this log by clicking 'download AI log'. View remote by sending: **ailog** directly followed by a valid email address (e.g. **ailog**name@conta-clip.de). When ready the module answers with a confirmation message and the AI log is received by the email address.

When connected, erase the event log by clicking 'erase AI log'. Erase remote by sending: *aiclr*. The module answers with a confirmation message.





#### 7.1.3 Counter log

When activated the counter log logs the value from activation start until midnight. After this it logs the value between midnight and midnight.

When connected, view this log by clicking 'download counter log'. View remote by sending: *clog* directly followed by a valid email address (e.g. *clog*name@conta-clip.de). When ready the module answers with a confirmation message and the counter log is received by the email address.

When connected, erase the event log by clicking 'erase counter log'. Erase remote by sending: *clclr*. The module answers with a confirmation message.



## 8 Software updates

## 8.1 Update

The module can perform firmware updates remote(OTA) or when connected by USB to a PC. **O**ver **T**he **A**ir (OTA) covers remote actions where the data is transmitted over mobile data.

#### 8.1.1 Manual firmware updates

Download the latest firmware at: <a href="http://www.conta-clip.com/en/service/">http://www.conta-clip.com/en/service/</a>

Access the 'advanced settings' by clicking the 'gearbox' icon.

After downloading, unzip the complete folder to a location on your PC. Click the firmware update button and the software prompts to the location of the firmware. Locate the unzipped folder and select the GSM-PRO2.jar file.

The firmware update takes about 2 minutes. After the update the module restarts itself.

**NOTE**: do NOT disconnect the module or turn off the power supply during this operation.

#### 8.1.2 OTA firmware update

To remotely update the firmware SMS: *fotap*. The module downloads the online firmware, installs it and restarts. When a firmware update is succeeded the module sends a confirmation to the sender.

To check the modules current firmware version send: *fwv*. The module answers <module name> firmware version: <version number>.

To check if there is a newer firmware version available send: *cupd*. The module answers <module name> (No) update found. Online <firmware version> local: <firmware version>.



## 9 I/O configuration and messaging

The module responds to read and write commands. Commands are preceded by an 'r' for read and 'w' for write actions.

All SMS commands are NOT case sensitive.

## 9.1 Digital Output

#### 9.1.1 Configuration

The following items can be configured with the software:

- Name
- After setting the digital output the module sends a confirmation message according to the configured rise or fall message. This message is sent only to the sender of the message.
- Send only the user defined text, this sends only the text defined in the message box, no module name, IO name and timestamp.
- Define your own instructions to control the output.
- Activate or toggle the output when starting a phone call with the module.
- Link DO to UI
- Activate when GSM connection lost, deactivate when GSM connection returns.
- Preserve or deactivate the status on restart or power cycle.

#### 9.1.2 Select users

The recipients have access to the associated digital output.

**NOTE**: Selected DO users do not have any rights to send other commands to the module other than addressed to the defined output.

#### 9.1.3 Messaging

It is possible to send self-made instructions or use the pre-defined instructions for the output. With these instructions the output can be activated, deactivated and activated for a given period of time (one-shot).

#### 9.1.3.1 Number ID

The number ID for setting the digital output can be disabled. When disabled the output responds on both SMS and incoming calls from everyone.

**NOTE**: keep safety precautions in mind when disabling this function together with the ring function due to unwanted incoming calls.

#### 9.1.3.2 User defined instructions

Use a self-made instruction to control the output. E.g. you may want to use the instruction *pumpon* to activate the output, and *pumpoff* to deactivate.

#### 9.1.3.3 Change the digital output status

To set a digital output (DO) send the following default message: *wdonx*, where x is the state. E.g. when you send *wdo11*, DO1 is set to 1.

If set, the module sends a confirmation message: 'status DO1=x'. If the output state is already in the state, the text: 'status not changed' is added to the answer.



#### 9.1.4 Using the one-shot function

The digital outputs can be set for a given time from 1 to 10 hours. When this command is received, the DO sets to 1 and after the number of seconds the DO falls back to 0. The one shot function is called by selecting the DO followed by a 't' for time and the time in seconds. E.g. when you send **wdo1t10** the DO is set for 10 seconds. The one-shot function sends two answers, one at the start and one at the end of the sequence.

**NOTE**: see user defined functions to define own instructions.

#### 9.1.5 React on RING

This function enables toggling a DO on a RING (phone call) command. When one of the selected users in the settings tab dials the number of the module it toggles the DOs and breaks the connection. The caller receives a SMS message with the status of the DO.

When the output timer value is set the output status is set to 1 for the amount of seconds set. If the output status is already 1 this is kept for the amount of seconds and then set to 0.

Clear the output timer value in the user interface to disable the timer function.

#### 9.1.6 Link DO to UI

The first DO can be linked to the first UI, the second DO to the second UI and so on. When a status change on a DI1 is detected the DO will adopt this status.

The status of the DO can always be overruled by an SMS message setting the output (see above). If the output has already the same state as the linked input the output will not change.

When the UI is set to analog the DO status is 0 when the AI status is normal. The DO status is set to 1 when the AI status is either low or high.

**NOTE**: This function can conflict with the SMS and RING instructions.

#### 9.1.7 Activate when GSM connection is lost

Select to activate an output when the GSM connection is lost. The output deactivates as soon as the GSM connection is re-established.

**NOTE**: This function can conflict with the SMS and RING instructions.

#### 9.1.8 Preserve status on startup

Choose if the status of the output is preserved on restart or power cycle. If deselected the output will be deactivated.

#### 9.1.9 Wiring example

In the following example the DO is connected as normally open.







### 9.2 Universal Inputs

The universal inputs can individual be configured as:

- Analog input AI (0..10V or 0..20mA)
- Digital input DI (default)

The selected button represents the chosen function and is set after uploading.

#### 9.2.1 Select receivers

The recipients receive the messages of the selected UI. **NOTE**: Selected UI users do not have any rights to send commands to the module.

#### 9.2.2 Confirmation sequence

When the confirmation is enabled, the module sends the message to the selected users one by one with an adjustable interval delay.

E.g. the sequence starts, the first phone number is addressed. When the delay time has expired, the next phone number in the list is addressed, and so on until the last phone number in the list is addressed. This can be repeated for selected number of times before the module stops the sequence.

The user who receives the message is able to stop the confirmation sequence by sending a chosen text (can be left blank) to the module before the delay has expired. The module answers: 'Confirmation ended <timestamp>'

**NOTE**: When a new status is reached on the UI, a new sequence is started and the old sequence is stopped automatically.

When there are one or more email addresses in the user list, the email is sent only once to all email addresses at the beginning of the sequence.

#### 9.3 Analog inputs

Each analog input (AI) represents a scaled value from 0 to 100% (10V or 20mA). Within this scale threshold values can be monitored.

#### 9.3.1 Configuration

Configure the following items:

- Name
- The unit for the input feedback. E.g. litres (Ltr) or kilograms (kg).
- Log this AI at a pre-set interval, see for interval settings.





- The min. value represents the scaled value for OV
- The max. value represents the scaled value for 10V or 20mA
- Lower limit threshold
- Upper limit threshold
- Minimal change (hysteresis)
- Send only the user defined text, this sends only the text defined in the message box, no module name, IO name and timestamp.
- The Analog Inputs can generate messages including value and unit when:
  - The upper limit + hysteresis is reached
  - The lower limit hysteresis is reached
  - The status recovers between the upper and lower limit +/- hysteresis

**NOTE**: The min./max. and threshold/hysteresis values are limited to 5 digits with a maximum of 2 decimals.

A delay in seconds can be set which a changed AI has to exceed before it is accepted, during the delay the UI led blinks. If the status of the delay is changed back again to the previous state before the delay is expired the change is discarded.

Clear the delay to disable detection delay.

#### 9.3.2 Wiring example

In the following example Ai1 is connected to an analog source.





## 9.4 Digital Inputs

The Digital Inputs can generate messages when:

- A rising flank is detected: the status changes from 0 to 1
- A falling flank is detected: the status changes from 1 to 0

#### 9.4.1 Configuration

Configure the following items:

- Name
- Rising / Falling flank message
- Send only the user defined text, this sends only the text defined in the message box, no module name, IO name and timestamp.
- Rising / Falling flank message delay: the changed status must be held for the given time before being accepted

#### 9.4.2 Wiring example

In the following example DI1 is connected to be pulled-up with +V.







## 9.5 Counter

The module has in input which can count up to 1000 pulses per second. The module can send messages on a given threshold. It can also log the counter values for each day.

Configure the following items:

- Activate Counter
- Name
- The unit for the feedback. E.g. Kwh
- Puls per Unit; E.g. when 100 pulses represent 1Kwh and a feedback or measurement is only wanted for Kwh and not the actual pulses.
- Threshold value; the module sends the configured message every time the threshold is reached
- Counter message; the message for the threshold
- Clear after send; the counter is cleared after sending the threshold value
- Send only the user defined text, this sends only the text defined in the message box, no module name, IO name and timestamp.
- Daily log; Logs the value between midnight and midnight
- Clear after Log; Clear the counter after logging the value

To request the actual Counter value send an SMS with the text '*CNT*'. The module answers with the counter value and unit, the value of the current day and the counter start timestamp.

To reset the counter send an SMS with the text 'CLRCNT'.

#### 9.5.1 Wiring example

In the following example the counter is connected to an SO (DIN43864) port.





## 9.6 Read all IO statuses

To retrieve the status of all IOs send: *rall*. The module answers: With the module name and the status of all IO's and extensions.

To send the full IO status to an email address send: *rall<email>*.

## 9.7 Link multiple modules

It's possible to link multiple modules by SMS. By selecting the 'send only user defined text' in the IO configuration it's possible to send the pre-defined messages to other modules.

For example: digital input 2 sends WDO11 on a rising flank to a second unit. This unit receives the message, set's the digital. On the falling flank the first unit sends WDO10 to deactivate the digital output on the second unit.

It is also possible to send an SMS to itself and activate digital outputs on reaction to digital inputs.

**NOTE**: The digital outputs cannot parse any messages. They only respond to their sender.

## 9.8 IO operating hours counter

The IO operating hours counter sums the total time the IO is in HI state. The counter can be turned on/off each individual digital in- and output. The counted value can be added to the periodical message and 'RALL'.

Counters are limited to 17500 hours (+/- 2 years).

NOTE: make sure to keep all IO's in LO state when configuring the counters due to faults in starting time.

#### 9.8.1 Digital output counter

To retrieve the counter value of an individual digital output, send: *timedo1*, where n is the number of the requested digital output.

To retrieve the counter value of all digital outputs send: timedo0.

To reset the counter value of an individual digital output, send: *clrtimedon*, where n is the number of the requested digital output. To reset all counter values of the digital outputs, send: *clrtimedo*0

#### 9.8.2 Digital input counter

To retrieve the counter value of an individual digital input, send: *timedin*, where n is the number of the requested digital input.

To retrieve the counter value of all digital inputs send: timedi0.

To reset the counter value of an individual digital input, send: *clrtimedin*, where n is the number of the requested digital input. To reset all counter values of the digital inputs, send: *clrtimedi*0



## **10 Extensions**

The number of IO on the module can be extended with external modules. These are connected with a bus driven interface by simple pushing the modules into another with the connector on the left side of the module.



### 10.1 Configuration

#### 10.1.1 Hardware

To adjust the bus address on each extension lift the lid with a small flat screwdriver and turn the rotary switch into the wanted position: address 00 to 99.

NOTE: each extension has to be configured with an unique address.



#### 10.1.2 Software

Access the 'advanced settings' by clicking the 'gearbox' icon and select 'Master'. To connect the GSM-PRO2 to a PLC select 'Slave', see chapter 'Modbus Slave'.



Configure the extension(s) for the module by clicking IO->Extensions. Click the 'Add' button to add a module. Fill the bus address as adjusted on the extension and choose the type of module. Click 'Add' and the module appears in the list. Repeat this step for the number of extensions connected to the module.

Each added module can be configured with a module name and up to 10 users who have access to the module in case of outputs, or receive messages in case of inputs.

NOTE: Failure on Extensions are sent to the users in the general message tab.

### 10.2 GSM-PRO-4DO

The 4DO has 4 CO outputs. The following items can be configured with the software for each output:

- Output name.
- Confirmation message for falling and rising flank.
- User defined instructions to change the status on or off or activate a one-shot.

To change the output status by a default message SMS: **WDOnxEa** where n is the output number, x the status and a the bus address.

To activate a one-shot by a default message SMS: **WDOnTxxxxEa** where n is the output number, xxxx the time in seconds and a the bus address.

**NOTE**: you can set multiple outputs with one SMS when they have the same user defined ON or OFF instruction.

In the following example Do1 is connected as normally open and Do4 is connected as normally closed.



Connect only to a single polarity supply! The following examples are not allowed:



#### 10.3 GSM-PRO-10DI

The 10DI has 10 digital inputs. The following items can be configured for each input:

• Name; default set as DI1 to DI10.



- Rising / Falling flank message
- Send only the user defined text, this sends only the text defined in the message box, no module name, IO name and timestamp.
- Rising / Falling flank message delay: the changed status must be held for the given time before being accepted

In the following examples all Di's are connected to be pulled-up:





#### 10.4 GSM-PRO-8AI

The 8AI has 8 analog inputs. Each analog input (AI) represents a scaled value from 0 to 100% (10V or 20mA). Within this scale threshold values can be monitored.

#### 10.4.1 Configuration

Configure the following items:

- Name; default set as AI1 to AI8.
- Input type: voltage, current or temperature
- The unit for the input feedback. E.g. litres (Ltr) or kilograms (kg).
- Offset: Calibrate the input value, e.g. temperature measurement with longer cables
- Log this AI at a pre-set interval, see for interval settings.
- The min. value represents the scaled value for OV
- The max. value represents the scaled value for 10V or 20mA
- Lower limit threshold
- Upper limit threshold
- Minimal change (hysteresis)
- Send only the user defined text, this sends only the text defined in the message box, no module name, IO name and timestamp.
- The Analog Inputs can generate messages including value and unit when:
  - The upper limit + hysteresis is reached
  - The lower limit hysteresis is reached
  - The status recovers between the upper and lower limit +/- hysteresis

**NOTE**: The min./max. and threshold/hysteresis values are limited to 5 digits with a maximum of 2 decimals.

A delay in seconds can be set which a changed AI has to exceed before it is accepted, during the delay the UI led blinks. If the status of the delay is changed back again to the previous state before the delay is expired the change is discarded.

Clear the delay to disable detection delay.



**NOTE**: Due to time consuming tasks the delay on extensions has an inaccuracy of up to 5 seconds.

#### 10.4.2 Wiring example

In the following example Ai1 and Al4 are connected to an analog source.



#### 10.4.3 Current input

When using the GSM-PRO-8AI as 0..20mA current input a  $250\Omega$  resistor has to be placed on the header marked with Ri on the number corresponding to the input.





## 10.5 GSM-PRO-4AO

The 4AO has 4 0..10V outputs. The following items can be configured with the software for each output:

- Output name.
- User defined instructions to change the value of the output.

To change the output status by a default message SMS: **WAOnxEa** where n is the output number, x the value in Volts and a the bus address.

In the following example Ao1 is connected as output.



**NOTE**: The 24VDC is connected to the modbus power and therefor the maximum output current depends on the number of the number of extensions being powered.



## 11 Modbus Slave

The GSM-PRO2 can be connected to a PLC as a communication device.

NOTE: It's only possible to use a GSM-PRO2 (not the PRO2E) to act as a Modbus Slave because the GSM-PRO2E uses the bus connection for different (internal) purposes.

## 11.1 Hardware

The GSM-PRO2 uses a 2 wire RS485 connection with the RTU Modbus protocol. Connect the GSM-PRO2 to a PLC using the GSM-PRO-CON.



#### 11.1.1 COM settings

The following COM settings can be configured for the Modbus connection:

- Baudrate: 9600, 19200, 38400, 57600, 115200
- Stop Bits: 1, 2
- Parity: None, Even, Odd

#### 11.2 Software

Access the 'advanced settings' by clicking the 'gearbox' icon and select 'Slave'. To connect extensions to the GSM-PRO2 select 'Master', see chapter 'Extensions'.

The GSM-PRO2 holds 3 types of registers, see the appendix for further details:

- 1. Message registers (501...510)
- 2. Digital registers (601...610)
- 3. Analog registers (701...710)

#### 11.2.1 Slave address

The slave address of the GSM-PRO2 is configured by software. Choose an address between 1 and 255 and upload this to the module.



#### 11.2.2 Message registers

Each of the 10 message registers can be configured with a text message and recipients. The default value of each register is '0'. When written to '1' the GSM-PRO2 will send the message to the recipients and writes the value of the register back to '0'.

#### 11.2.3 Digital registers

The digital registers can contain a value of '0' or '1' which can be altered by user defined or pre-defined SMS instructions.

This way remote digital instructions can be given to the PLC.

#### 11.2.4 Analog registers

The analog registers can contain a value between '0' and '65535' which can be altered by user defined or predefined SMS instructions.

This way remote analog instructions can be given to the PLC.

#### 11.2.5 Default messaging

To change the register value by a default message SMS: **WREGnv** where n is the register address and v the value.

To read the register value by a default message SMS: *RREGn* where n is the register address.

#### 11.2.6 Restart module

Modbus register 10 is default set to '1' on startup. When written to '0' the GSM-PRO does a restart.



## 12 Other messages

## 12.1 Module reset

Reset with the following command: *wreset*. This performs a full module reset. The module answers with the power cycle message if set.

## 12.2 Stop messaging

The command: *mesoff* will stop the module from sending any more messages. The module answers: 'messaging turned off'.

To turn back on the messaging send: *meson*. The module answers: 'messaging turned on'.

## 12.3 Show all SMS commands

Send *help* to receive a list with all commands. See chapter 10 for an overview.

## 12.4 Location

When a module is equipped with GPS send an SMS: **location** to receive a link to Google maps with a pinpoint to the module.



## 13 Additional software

## 13.1 GSM-PRO2 App

The GSM-PRO2 App can be downloaded from the Google Play store for Android, from the Apple Store for Apple iOS and the Windows App store for Windows Phone.



With the app you can view the IO status and events or set an output by simple tapping your smart phones touch screen. No longer need to remember any SMS codes.

	10:00	■ [®] <b>* ?</b> . <b>1</b> 92% <b>1</b> 10:01			•		∦ 🛜 "վ 92% 🛢 10:01		
<b>ZCONTACLIP</b>			<b>Z</b> CONTACLIP			<b>ZCONTACLIP</b>			
Gsm-pro-2 nai	me 1	<b>(a)</b>		Gsm-pro-2 name 1	6	€	Gsm-pro-2 n	ame 1 🕜	
O Pull to refree Map	sh	AI		Gsm-pro-	2 name 1	Grotere ka	aart weergeven	S Inloggen	
Savelveld 1, Stramproy, NL	0 km	> Ar	ea		0 to 10 v				
Input		Tr	eshold	< 6.0	) v > 3.0 v		NCV2		
input 1 name	DI OFF		10 — 6.0 —						
input 2 name	AI _2.5	>		2.5 v		enroyergren	15W89		
Output			3.0 —			ramp.			
D01	0 OF	F							
Extensions						Ieweg		N292 +	
extension GSM-	-PRO-4DO	>				DE	Google Google - Kaartgegevens ©2016	Google Gebruiksvoorwaarden	



## 14 Troubleshooting

## 14.1 Cannot connect to the PC, no module found

- Re-connect the USB cable from the PC.
- Reboot the PC (after driver installation).
- Start the program as administrator, right click->Run as administrator.
- Try a different USB port, remove any hubs or extension cables.

### 14.2 No connection to GSM network

- Make sure the SIM card is placed correctly.
- Check the diagnostics tab for error messages, PUK or PIN required.
- Check the signal strength.

## 14.3 The module doesn't send any messages

- Is the used IO proper set.
- Make sure the SIM card is placed correct.
- Does the prepaid card holds enough credit.
- Check your email spam/unwanted box.

### 14.4 The module doesn't start

• Disconnect from power, wait 5 minutes and reconnect to power.

## 14.5 Diagnosis

For additional troubleshooting, the activities in the module can be monitored with the diagnosis window. To open this right click the GSM-PRO2 icon in the taskbar and select 'open Diagnostics'.



# 15 appendix: SMS commands

RALL	=> read all IOs
WDOnx	=> write digital output number n to status x
WDOnTxxxx	=> write digital output number n to status 1 for xxxx seconds
WRESET	=> device reset
CCFm	=> mail configuration file to email address m
EVLOG <i>m</i>	=> mail event log to email address m
EVCLR	=> clear event log
AILOG <i>m</i>	=> mail AI log to email address m
AICLR	=> clear analog inputs log
CLOGm	=> mail counter log to email address m
CLCLR	=> clear counter log
FOTAP	=> firmware over the air provisioning
ROTAC	=> request over the air configuration
СОТАС	=> check over the air configuration
CDC	=> check data connection
FWV	=> request firmware version
MESON	=> turn on messaging
MESOFF	=> turn off messaging
TIME	=> synchronize date/time by SMS
TIMEDIn	=> request digital input hour counter n, use '0' for all di's
TIMEDO	=> request digital output hour counter n, use '0' for all do's
CLRTIMEDIn	=> reset digital input hour counter n, use '0' for all di's
CLRTIMEDO	=> reset digital output hour counter n, use '0' for all do's
IMEI	=> request IMEI number
STATUS	=> request diagnostics
WDOnxEa	=> write digital output number n to status x on extension address a



WDOnTxxxxEa	=> write digital output number n to status 1 on extension address a for xxxx seconds
Location	=> Send a link to Google Maps with the position of the module
HELP	=> view all SMS commands
CSQ	=> check signal quality and strength
CNT	=> request counter value
CLRCNT	=> clear counter
DELETEFROMAPP	=> remove the module from the APP database
WREGnv	=> Write Modbus Register n to value v
RREGn	=> Read Modbus Register n



# 16 APPENDIX: diagnostic commands

MPWR	=> device power (V)
UIn	=> request ui number n, use '0' for all ui's
Dox	=> set do to status x
Mbwaaarrrv	=> Modbus write address aaa(3 digit), register address rrr (3 digit), value v
Mbraaarrr	=> Modbus read address aaa(3 digit), register address rrr (3 digit)



# 17 Appendix: signal strengths

Appendix Signal strengths					
% (percentual)	Remark				
0,0%	Too low for connectivity				
3,2%	Too low for connectivity				
6,5%	Too low for connectivity				
9,7%	Too low for connectivity				
12,9%	Too low for connectivity				
16,1%	Too low for connectivity				
19,4%	Too low for connectivity				
22,6%	Too low for connectivity				
25,8%	Too low for connectivity				
29,0%	Too low for connectivity				
32,3%	Too low for connectivity				
35,5%	Too low for connectivity				
38,7%	Too low for connectivity				
41,9%	Too low for connectivity				
45,2%	Too low for connectivity				
48,4%	Marginal reception				
51,6%	Marginal reception				
54,8%	Marginal reception				
58,1%	Marginal reception				
61,3%	Marginal reception				
64,5%	Reasonable reception				
67,7%	Reasonable reception				
71,0%	Reasonable reception				
74,2%	Reasonable reception				
77,4%	Reasonable reception				
80,6%	Good reception				
83,9%	Good reception				
87,1%	Good reception				
90,3%	Good reception				
93,5%	Good reception				
96,8%	Too high! Please attune your signal strength				
100,0%	Too high! Please attune your signal strength				

GSM-PRO2



# 18 Appendix: Modbus Registers

Description	Read/Write	Register	Data description	Saved	Min.	Default	Max.
Restart	R/W	10	Write to 0 to restart.		0	1	1
Message 1	R/W	501	Write to 1 to send message	V	0	0	1
Message 2	R/W	502	Write to 1 to send message	V	0	0	1
Message 3	R/W	503	Write to 1 to send message	V	0	0	1
Message 4	R/W	504	Write to 1 to send message	V	0	0	1
Message 5	R/W	505	Write to 1 to send message	V	0	0	1
Message 6	R/W	506	Write to 1 to send message	V	0	0	1
Message 7	R/W	507	Write to 1 to send message	V	0	0	1
Message 8	R/W	508	Write to 1 to send message	V	0	0	1
Message 9	R/W	509	Write to 1 to send message	V	0	0	1
Message 10	R/W	510	Write to 1 to send message	V	0	0	1
Digital 1	R/W	601	Digital Control Value	V	0	0	1
Digital 2	R/W	602	Digital Control Value	V	0	0	1
Digital 3	R/W	603	Digital Control Value	V	0	0	1
Digital 4	R/W	604	Digital Control Value	V	0	0	1
Digital 5	R/W	605	Digital Control Value	V	0	0	1
Digital 6	R/W	606	Digital Control Value	V	0	0	1
Digital 7	R/W	607	Digital Control Value	V	0	0	1
Digital 8	R/W	608	Digital Control Value	V	0	0	1
Digital 9	R/W	609	Digital Control Value	V	0	0	1
Digital 10	R/W	610	Digital Control Value	V	0	0	1
Analog 1	R/W	701	Analog Control Value	V	0	0	65535
Analog 2	R/W	702	Analog Control Value	V	0	0	65535
Analog 3	R/W	703	Analog Control Value	V	0	0	65535
Analog 4	R/W	704	Analog Control Value	V	0	0	65535
Analog 5	R/W	705	Analog Control Value	V	0	0	65535
Analog 6	R/W	706	Analog Control Value	V	0	0	65535
Analog 7	R/W	707	Analog Control Value	V	0	0	65535
Analog 8	R/W	708	Analog Control Value	V	0	0	65535
Analog 9	R/W	709	Analog Control Value	V	0	0	65535
Analog 10	R/W	710	Analog Control Value	V	0	0	65535